



## **Instructions for Changing the Firmware on the i Series Zebra Card Printer**

1. Make sure printer is turned on.
2. Download the appropriate .bin file and save in a folder on the computer.
3. Open the printer control panel.
4. Select the appropriate i Series printer.
5. Right mouse-click on the printer, select Properties.
6. Select Device Settings tab.
7. Select F/W Download...
8. Select the Properties button.
9. Select "Select File" button.
10. Browse to the directory where the .bin file is located.
11. Select the .bin file, Open.
12. Select Start Firmware Download.
13. Wait for "Firmware DownLoaded Successfully..." message
14. Select Close
15. Select OK
16. Repeat steps 4-6
17. Check firmware version by checking the number listed after "Printer Model/Firmware Version".